DISPOSAL REPAIR TIPS

If the unit jams/hums...

- 1. Turn the unit off. After turning the unit off, remove anything that has fallen into the grinding chamber.
- 2. Turn the unit off. After turning the unit off, insert an "un jamming" tool into the bottom and turn clockwise. Once the tool turns freely, remove whatever was causing the jam.
- 3. If the unit is dead, press the red reset button located on the bottom of the disposal if the unit begins to hum and the reset trips again, it is still jammed. Repeat step #2 and #3.

Tech Tip - Always run water in the sink when you operate the unit.

Call Topic Appliance Professionals for all of your Appliance Needs!

"Over 25 Years of Experience Servicing the Niagara Peninsula and Greater Hamilton Area"

905-929-7412